




Pull alloy cover outwards and off axle.



Tip hub at 45 degrees to allow lube to run inside hub.

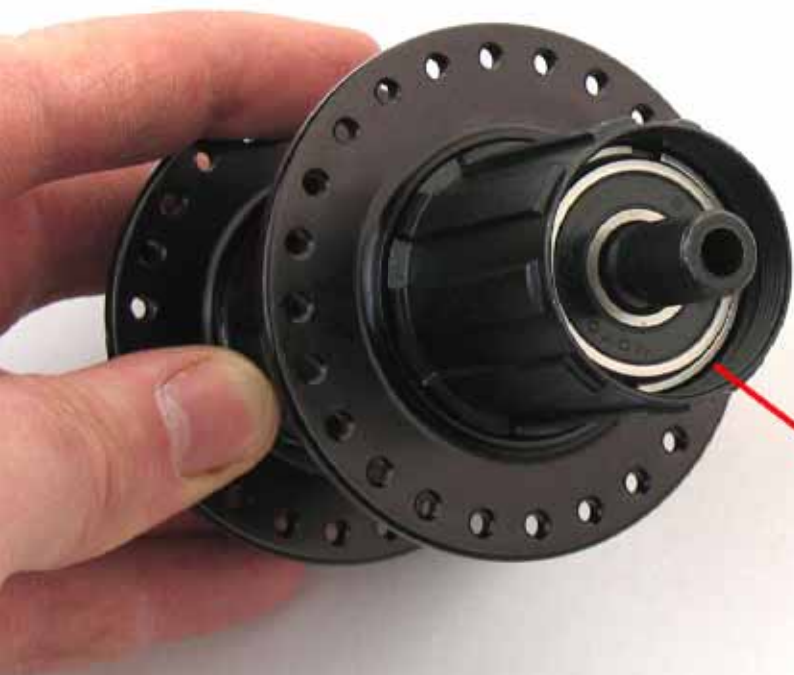

Apply 5 drops thick oil to gap, whilst slowly rotating cassette body.